

Release Note for AIC SAS 6G Hot-swappable Expander

Sep 21, 2015

Changelog


- 09/21/2015 (firmware 1.11.5.10 + mfg 1.5.0.6) - Part Number (B98-00XUXXE2110510 + B98-00XUXXG2050006)
Old Part Number B98-00XUXXE2110508 is replaced by B98-00XUXXE2110510.
1. Resolve the firmware not working while Backplane I2C hangs
 2. Add the console command "serial_number" to configure serial number.
- 07/02/2014 (firmware 1.11.5.8 + mfg 1.5.0.6) - Part Number (B98-00XUXXE2110508 + B98-00XUXXG2050006)
Old Part Number B98-00XUXXG2050005 is replaced by B98-00XUXXG2050006.
1. Resolve the drive mapping issue in Windows with SAS 12G HBA
- 05/15/2013 (firmware 1.11.5.8 + mfg 1.5.0.5) - Part Number (B98-00XUXXE2110508 + B98-00XUXXG2050005)
Old Part Number B98-00XUXXE2110507 is replaced by B98-00XUXXE2110508.
1. Add the console command "enclosure_addr" to configure the enclosure address.
 2. Add the console command "sas_standby_timer" to configure the SAS standby timer.
 3. Add the console command "check_wide_port" to configure the wide port checker.
- 03/26/2013 (firmware 1.11.5.7 + mfg 1.5.0.5) - Part Number (B98-00XUXXE2110507 + B98-00XUXXG2050005)
Old Part Number B98-00XUXXG2050004 is replaced by B98-00XUXXG2050005.
1. Mis-configure 2U24swap and 2U24swap2.
- 03/26/2013 (firmware 1.11.5.7 + mfg 1.5.0.4) - Part Number (B98-00XUXXE2110507 + B98-00XUXXG2050004)
Old Part Number B98-00XUXXG2050003 is replaced by B98-00XUXXG2050004.
1. Resolve the issue that fans stop spinning in low temperature.
- 12/10/2012 (firmware 1.11.5.7 + mfg 1.5.0.3) - Part Number (B98-00XUXXE2110507 + B98-00XUXXG2050003)
Old Part Number B98-00XUXXE2110506 is replaced by B98-00XUXXE2110507.
1. Resolve the issue of uncontrollable HDD fault LED after the HDD is removed/re-inserted.
- 10/29/2012 (firmware 1.11.5.6 + mfg 1.5.0.3) - Part Number (B98-00XUXXE2110506 + B98-00XUXXG2050003)
Old Part Number B98-00XUXXG2050002 is replaced by B98-00XUXXG2050003.
1. Change the text descriptor for Array Device from "ArrayDeviceYY" to "DiskZZZ" where YY is the slot ID in hexadecimal form and ZZZ is the slot ID in decimal form.
- 10/19/2012 (firmware 1.11.5.6 + mfg 1.5.0.2) - Part Number (B98-00XUXXE2110506 + B98-00XUXXG2050002)
Old Part Number B98-00XUXXE2110505 is replaced by B98-00XUXXE2110506.
Old Part Number B98-00XUXXG2050001 is replaced by B98-00XUXXG2050002.
1. Add signal settings to support 2U24swap, 2U24swap2, 3U16swap, and 4U24swap.
- 10/04/2012 (firmware 1.11.5.5 + mfg 1.5.0.1) - Part Number (B98-00XUXXE2110505 + B98-00XUXXG2050001)
Old Part Number B98-00XUXXE2110504 is replaced by B98-00XUXXE2110505.
1. Resolve the issue "the secondary expander can not set T1, T2, and alarm (critical) threshold into Enclosure".
- 09/21/2012 (firmware 1.11.5.4 + mfg 1.5.0.1)
1. Resolve temperature setting for 3U16/4U24 hot-swappable backplane.
- 05/17/2012 (firmware 1.11.5.3 + mfg 1.5.0.1)
1. Resolve the fan failure occasionally.
- 05/11/2012 (firmware 1.11.5.2 + mfg 1.5.0.1)
1. Support 2U24 hot-swappable backplane only.

Definition of the visual LED indicators (blue and red) associated with a disk drive


Host Control Bit	Blue LED	Red LED
OK	ON	OFF
RSVD DEVICE	ON	OFF
HOT SPARE	ON	OFF
CONS CHECK	ON	Fast blink
IN CRIT ARRAY	ON	Slow blink
IN FAILED ARRAY	ON	Slow blink
REBUILD/REMAP	ON	Fast blink
R/R ABORT	ON	Slow blink
ACTIVE	ON	OFF
DO NOT REMOVE	ON	OFF

MISSING	ON	ON
INSERT	ON	Slow blink
REMOVE	ON	Slow blink
IDENT	Slow blink	OFF
FAULT	ON	ON
DEVICE OFF	ON	OFF

Supported Configuration

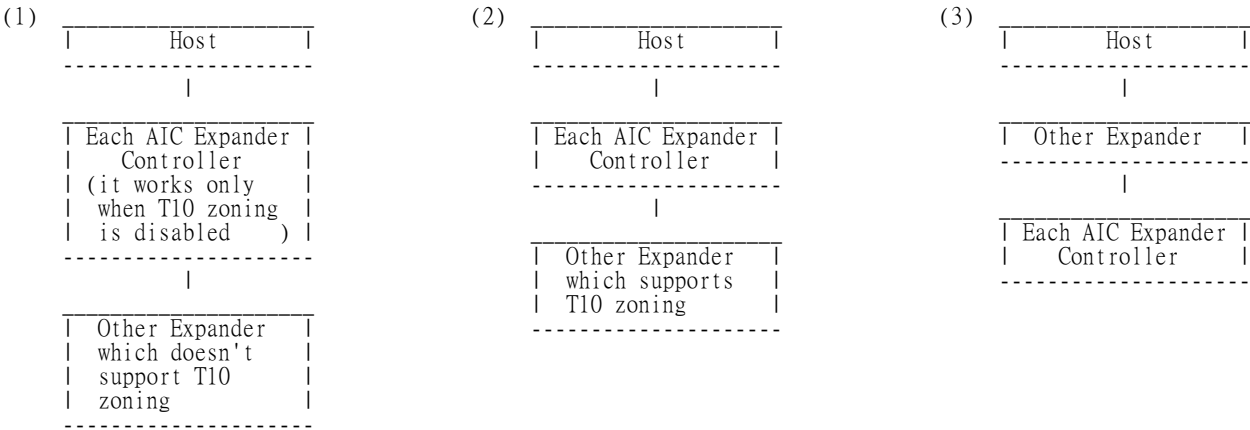

Most 3G Expanders don't support T10 zoning.

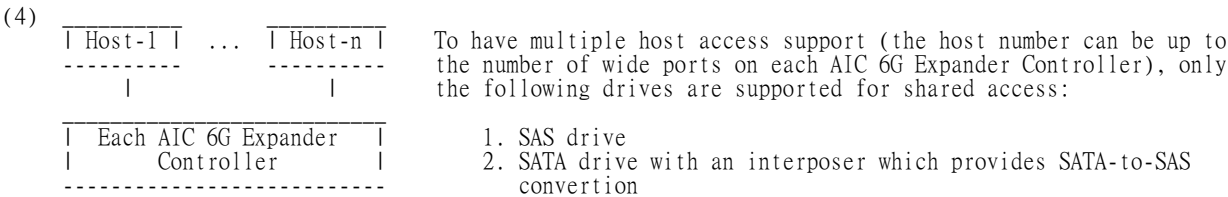

Unsupported Configuration

1. This only applies to the enclosure which supports dual AIC 6G Expander Controllers.
The enclosure with dual AIC 6G Expander Controllers attached is inserted with a SATA drive without any interposer. It will cause the drive LEDs behaves incorrect.

Command Line Interface Operation

1. How to enable/disable T10 zoning
The default T10 zoning configuration is off.
 - (A) Check the current zoning state
cmd> phyzone state
Zoning is OFF
 - (B) Enable zoning
cmd> phyzone on
 - (C) Disable zoning
cmd> phyzone off
2. How to configure T10 zoning
After enabling T10 zoning, three predefined groups are Group1, Group8, and Group9. Each PHY should be in one of the three group, and all PHYs in a wide port should be in the same group. Each PHY in Group1 can access any PHY in other groups, and vice versa. Each PHY in Group8 cannot access any PHY in Group9, and vice versa.

The default configuration, which allows two wide ports can access all drives, follows.

- (A) PHY0 - PHY3 for the UP wide port (the first port) : Group8
- (B) PHY4 - PHY7 for the UP/DOWN wide port (the second port) : Group1
- (C) PHY8 - PHY11 for the third port if available : Group1
- (D) PHY12 - PHY35 for drive : Group1

The command syntax is "phyzone phy_index group". The following example shows how to setup one drive accessed only the first port and another drive accessed only by the second port.

Step 1: Read the current group for PHY4

```
cmd> phyzone 4
Phy 4 for Zone Group 1
```

Step 2: Assign the second port (PHY4 - PHY7) for Group9

```
cmd> phyzone 4 9
cmd> phyzone 5 9
cmd> phyzone 6 9
cmd> phyzone 7 9
```

Step 3: Assign the drive on PHY12 to be accessed only by the first port instead of the second port

```
cmd> phyzone 12 8
```

Step 4: Assign the drive on PHY13 to be accessed only by the second port instead of the first port

```
cmd> phyzone 13 9
```

Step 5: Reset

3. How to get all revisions in AIC SAS 6G Expander

- (A) Expander firmware revision

```
cmd> rev
```
- (B) Expander configuration revision

```
cmd> showmfg
```
- (C) Microchip firmware for managing sensors

```
cmd> sensor
```

4. How to configure temperature sensor

Four temperature settings in Celsius are T1, T2, warning threshold, and alarm (critical) threshold.

- (A) Get the current temperature settings

```
cmd> temperature
```

Temperature in Celsius (t1=20 C, t2=55 C, warning=50 C, alarm=55 C)

(B) Set temperature with new T1=18 C, T2=52 C, warning threshold=48 C, and alarm threshold=54 C. The new setting will take effect after reset.

```
cmd> temperature 18 52 48 54
cmd> reset
```

5. How to configure enclosure address

- (A) Get the current enclosure address

```
cmd> enclosure_addr
```

Enclosure Address: 0x500605B0000272BF
- (B) Set the enclosure address with 0x500605B0000272BF. The new setting will take effect after reset.

```
cmd> enclosure_addr 500605B0000272BF
cmd> reset
```

6. How to configure SAS standby timer

This feature is applicable for SAS drives instead of SATA drives. SAS standby timer is in units of minutes. Setting SAS standby timer with 0 minute disables this feature.

- (A) Get the current SAS standby timer

```
cmd> sas_standby_timer
```

SAS standby timer : 0 minutes
- (B) Set the SAS standby timer with 10 minutes. The new setting will take effect after reset.

```
cmd> sas_standby_timer 10
cmd> reset
```

7. How to configure wide port checker

This feature is applicable for SAS drives instead of SATA drives. If there is no connection with any active SAS initiator by checking all wide ports, AIC Expander Controller stops all attached SAS drives to

save power consumption of SAS drives. Otherwise, AIC Expander Controller starts all attached SAS drives to provide drive access service to any active SAS initiator.

- (A) Get the current state of wide port checker
cmd> check_wide_port
Checking wide port is OFF
- (B) Enable checking wide port. The new setting will take effect after reset.
cmd> check_wide_port on
cmd> reset
- (C) Disable checking wide port. The new setting will take effect after reset.
cmd> check_wide_port off
cmd> reset

8. How to configure serial number

- (A) Get the current serial number
cmd> serial_number
Expander number: 421-12021704510010
or
Expander number: 421-12021704510010 Enclosure number: 526-12071100500088
- (B) Only set Expander serial number with 421-12021704510010.
cmd> serial_number 421-12021704510010
- (C) Set both of Expander serial number (421-12021704510010) and Enclosure serial number (526-12071100500088).
cmd> serial_number 421-12021704510010 526-12071100500088